 


(Jumpers Shown In
Default Positions)



JP2

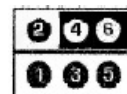

JP3



JP4



JP6


Jumper on JP2 Pins 1 & 2 = FX Channels 1 & 2 (DEFAULT) / Pins 2 & 3 = FX Channel 1 Only

Jumper on JP3 Pins 4 & 6 = DI is Pre EQ (DEFAULT) / Pins 3 & 5 = DI is Post EQ

Jumper on JP4 Pins 1 & 2 = Mute Tuner/Send is ON (DEFAULT) / Pins 3 & 4 = Mute Tuner/Send is OFF

Jumper on JP4 Pins 7 & 8 = Mute DI is OFF (DEFAULT) / Pins 5 & 6 = Mute DI is ON

Jumper on JP6 Pins 2 & 3 = Mono footswitch - IIS (DEFAULT) / Pins 1 & 2 = Dual footswitch - IIS and Muting

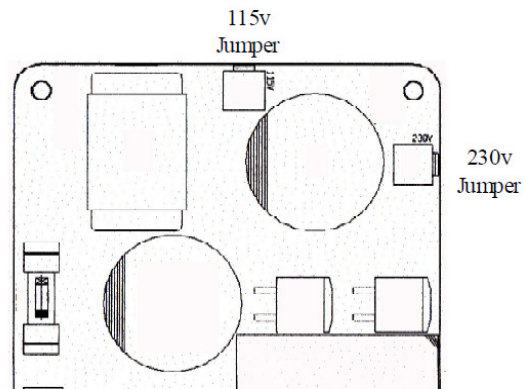

Changing Line Voltage on Micro and Doubler:

Changing the line voltage should only be done by a qualified service technician.

Using the Micro or Doubler with an incorrect line voltage will void the warranty.

With the power off and the unit unplugged remove the top.

Move the blue wire to the appropriate setting for your country.