

FLEXCORE

INSTRUCTIONAL OVERVIEW

Volume Board

(from white 4 pin "Volume" connector and white 3 pin "Active/Passive" connector)

Balancer Board

(Connect pickups, batteries, coil tap, output jack, etc., here)

EQ Board

(from white 5 pin connector)

Treble Board**

(From blue connector on EQ Board)

Hi Mid Board*

(From either orange connector on EQ Board)

Lo Mid Board*

(From either orange connector on EQ Board)

Battery (+)
Neck PU Hot (+)
Neck PU Tap
Neck PU Ground
Bridge PU Hot (+)
Bridge PU Tap
Bridge PU Ground
Shields Ground

AVAILABLE EXPANSION MODULES SOLD SEPARATELY:

- Stacked Volume/Passive tone
- Active/Passive Toggle Switch
- Coil Tap Switch
- Midrange Frequency Switch
- Standby Switch
- ...and more.

* If no midrange control is desired, the midrange boards need not be attached at all. The orange connectors on the EQ are interchangeable.

** If you purchased a Flex Core x.2, you did not receive a Treble board. The Treble function is located on the TOP shaft of the dual pot on the EQ board.

Note: Wire colors may differ from photo.