



TECH 21 USA • INC.

790 Bloomfield Avenue, Clifton, NJ 07012 • T: 973-777-6996 • F: 973-777-9899 • info@tech21nyc.com • www.tech21nyc.com

August 2, 2017

SERVICE NOTES for GED-2112

For Qualified Technicians Only

WARNING: No user-serviceable parts inside. Opening and altering the contents within will void the warranty unless performed by a qualified service technician.

NOTE: The following service notes are recommended as one-time only procedures. It is NOT recommended to make these changes on a repeated basis.

DESCRIPTION:

The GED-2112 contains two internal jumpers. The first allows the outputs to be tied together so both channels can be fed through a single output. The second is to configure the operation of the Function Switch from “mute” to “bypass”.

1. Remove AC cable from unit.
2. Remove bottom cover for access to circuit boards. Carefully unscrew six philips head screws securing bottom cover to chassis. Be sure to use #2 size screwdriver. Set cover and screws to the side.
3. Jumpers are located near the FX loop return jack.

TIE JUMPER: The GED-2112 is shipped from the factory with Drive and Deep channels routed through their respective XLR and ¼” jacks. This configuration is shown in PHOTO 1 below.



PHOTO 1

Moving the jumper to the “TIE” position will combine the Drive and Deep channels to the ¼” and XLR Drive and Deep output jacks. Please refer to PHOTO 2 below.

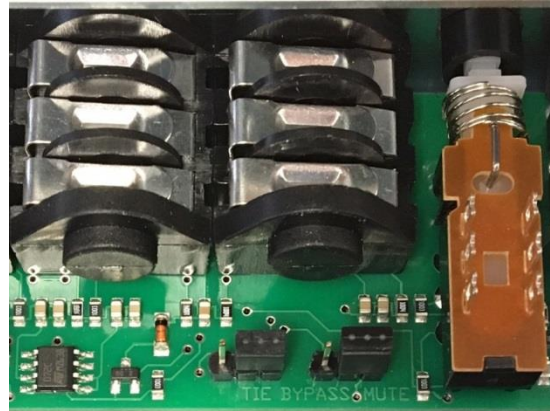


PHOTO 2

FUNCTION SWITCH JUMPER: The GED-2112 is shipped from the factory with the Function Switch operating as a mute button. Please refer to PHOTO 1 on previous page.

Moving the jumper to the “BYPASS” position will send unaffected signal through the ¼” and XLR Drive and Deep jacks when the Function Switch is disengaged. Please refer to PHOTO 3 below.



PHOTO 3

4. After configuring jumpers to desired positions, replace bottom cover. Be sure not to over-tighten or strip the six philips head screws.