


(modified for parallel only)

Wiring is modified for parallel only operation. When both pickups are in parallel, volume level is consistent across all 5 positions. Blue and purple wires are the modifications to stock wiring, plus connecting the white pickup wires to ground (along with the red pickup wires which already go there).

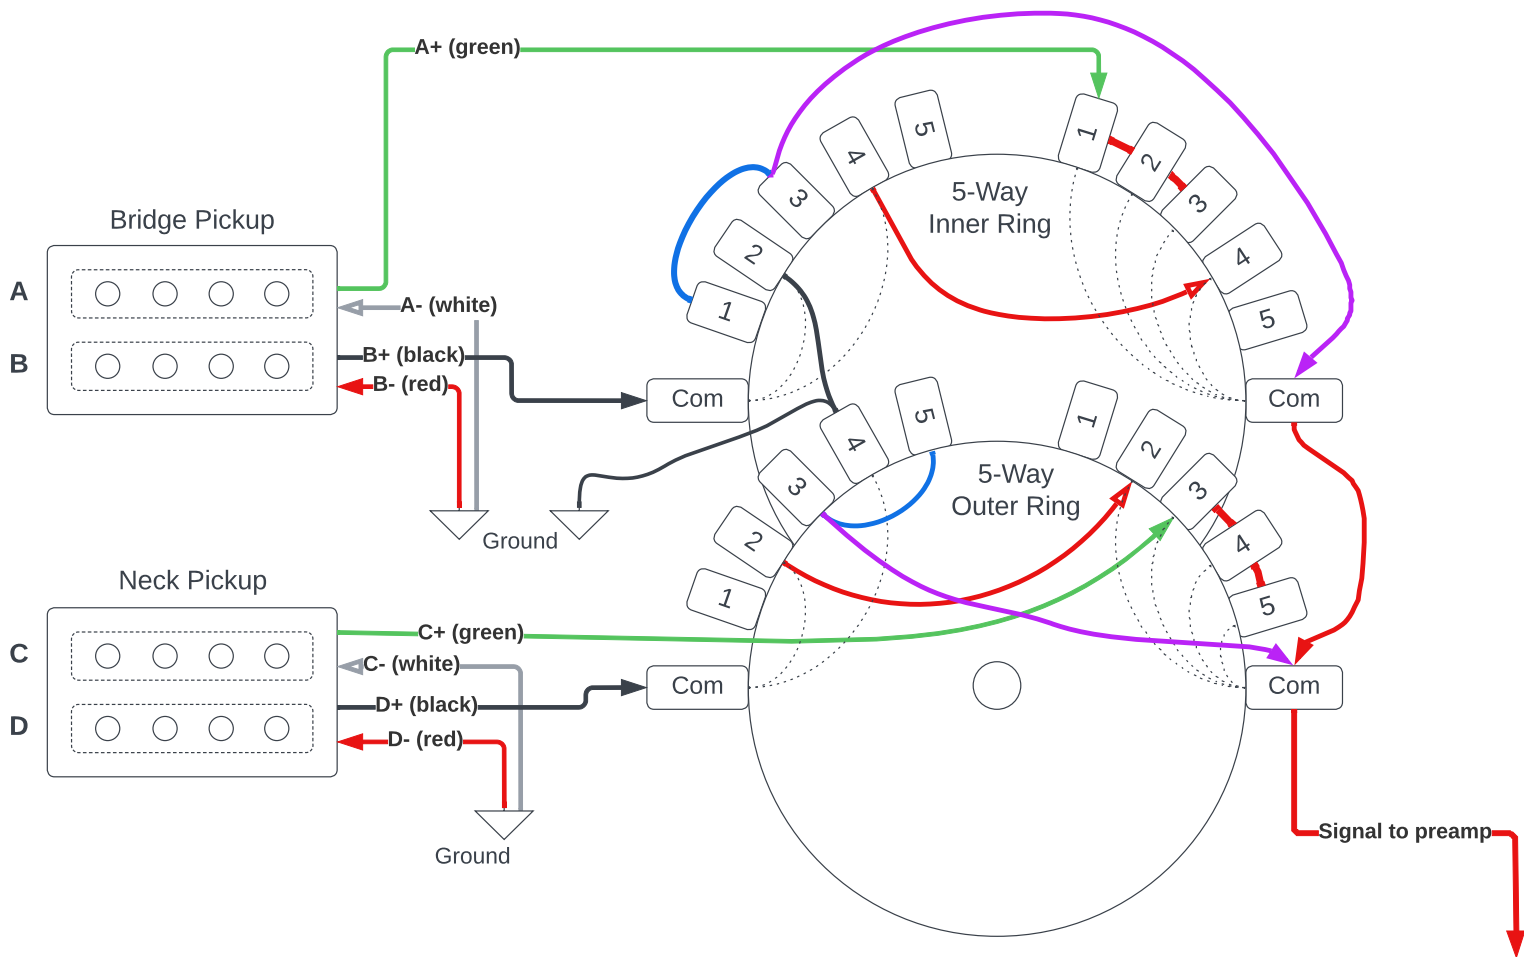

5-Way Switch Positions

- (1) Bridge Only (A+B)
- (2) Outer Coils (A+D)
- (3) All Coils (A+B+C+D)
- (4) Inner Coils (B+C)
- (5) Neck Only (C+D)

+ indicates parallel relationship

The 5-way switch has 4 independent poles, the independent common contacts are connected with the numbered contacts based on switch position. Possible in-use connections are shown with dotted lines.