


Electra Vs & Electra M

Solder...

- 1) "Ground (E)" from right connector to pot-cover
- 2) "Pick-Up Ground (A)", "Ground (D)" and "White PreAmp wire" to pot-cover
- 3) "Pick-Up Hot (B)" to "Pink PreAmp wire"
- 4) "Jack Hot (C)" to middle connector
- 5) "Blue" wire to left connector

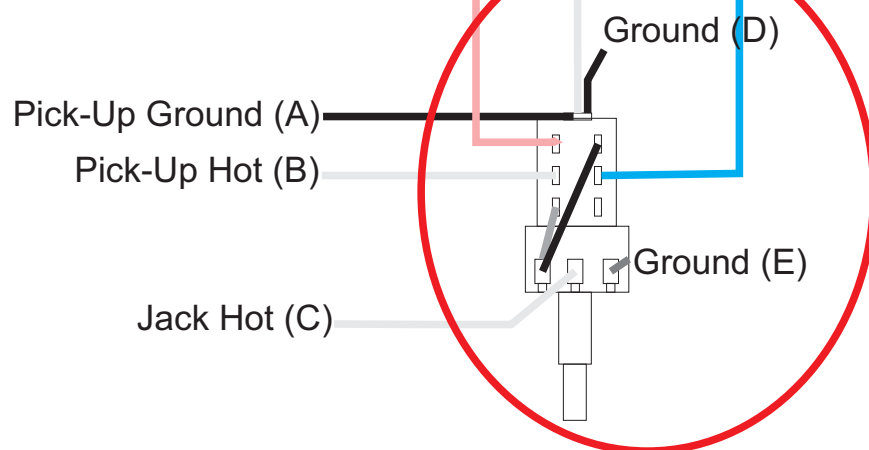

Preamp with
Linear 500kOhm Pot
without the passive option

