



MUTE ASSEMBLY MOUNTING TEMPLATE VINTAGE JAZZ BASS

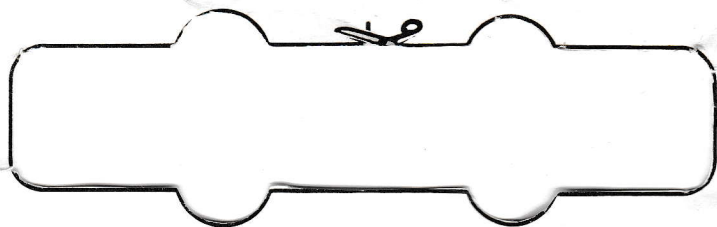

INSTRUCTIONS

1. Cut out pickup pocket outlines.
2. Remove bridge cover and pickup cover.
3. Position template over pickups. Center punch four (4) mute holes through paper.
4. Remove template and drill the center punched holes 5/8" deep with a 3/32" diameter drill.
5. Fasten each mute assembly to body with a flat washer (P/N 022376) and screw (P/N 019673) provided.
6. Replace bridge cover and pickup cover.

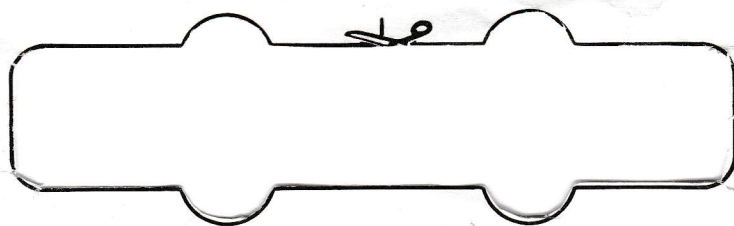

MOUNTING HOLE LOCATIONS